


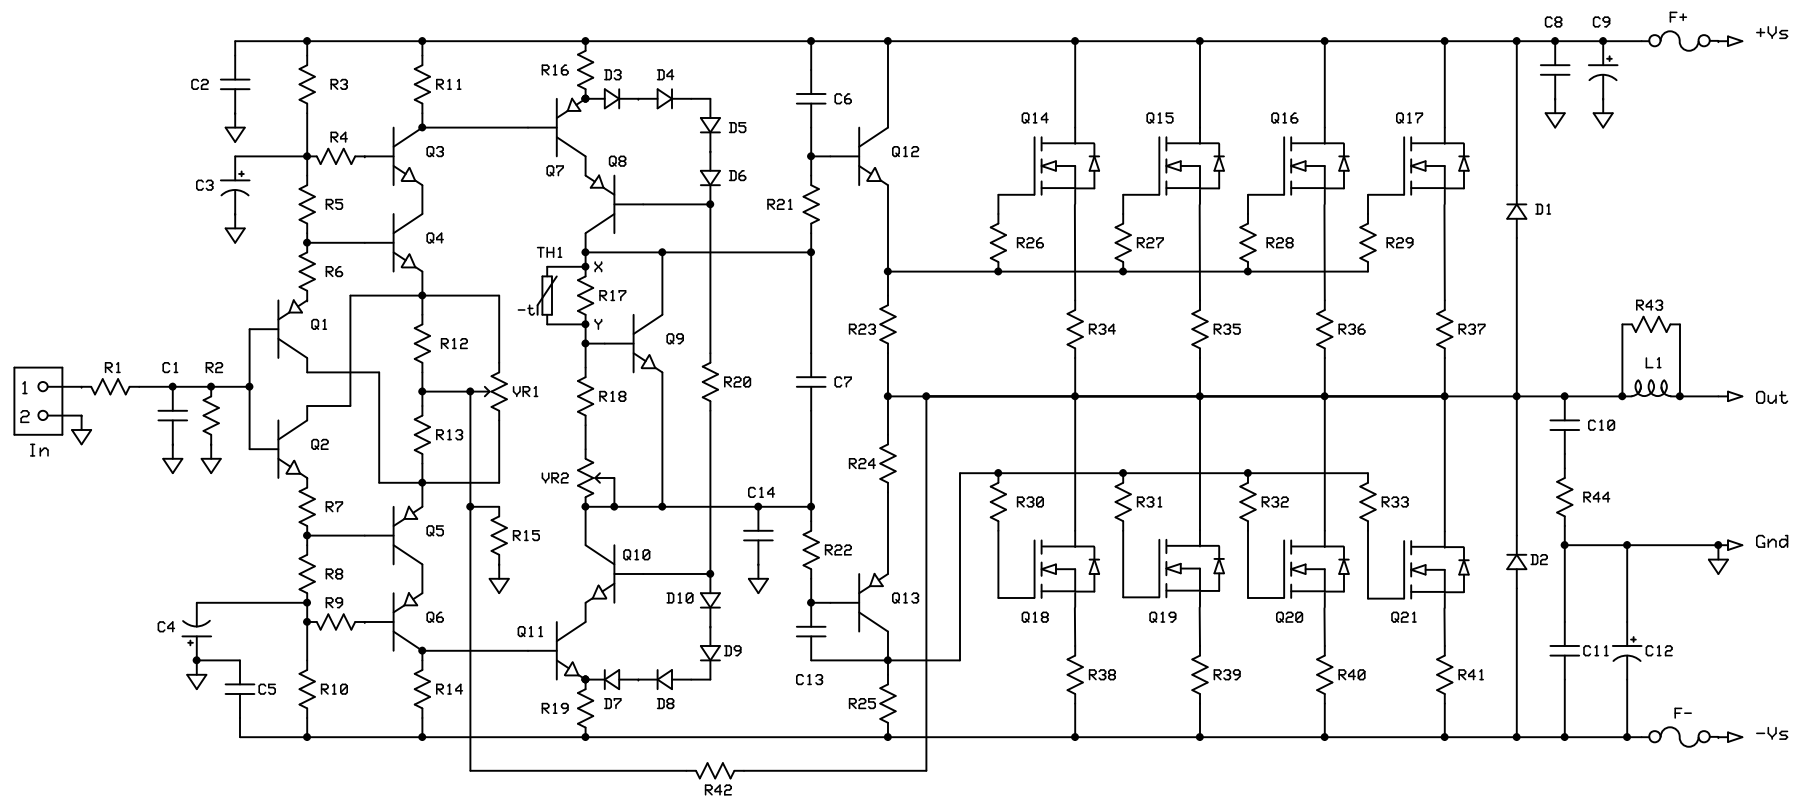

NOTES:

1. C14 is populated and soldered on the copper side of PCB.
2. R45 not shown in the schematic is populated in the PCB.

BuildAudioAmps.com

Project 54 CFA10 QuasiMOSFET

Drawn by: EG

Rev 1.0

9/25/2015

Page 1 of 1